


Intonacatrice continua MIXER LIGHT cappotto - Gruppo acqua

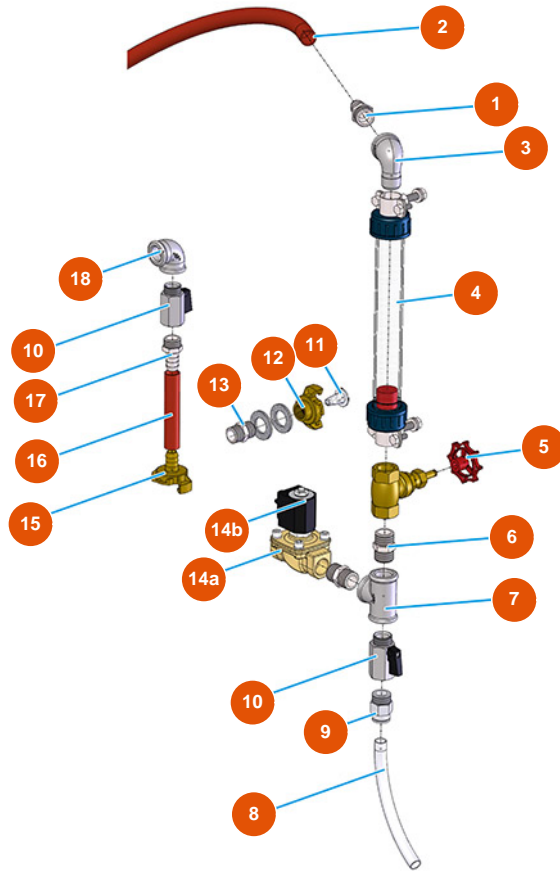

Détails des pièces

Pos.	Référence	Désignation
1	3G50300200	Portagomma 1/2"X14"
2	3F00700201	Tubo PVC/gomma 13x19 (senza Geka)
3	3G00509202	Gomito 90° zincato MF FIG.92 1/2"
4	3G01101001	Flussimetro 60/600 L/H
5	3G01300211	Valvola regolazione spillo 1/4"
6	3G00528002	Nipplo zincato FIG.280 1/2
7	3G00513002	Raccordo a T zin. FIG.130 1/2
8	3G50500200	Tubo 12X14 RILSAN
9	3G50200101	Attacco legris diritto 1/2X14 3175
10	3G01200301	Rubinetto a sfera MF1/2" esagonale
11	3A00100600	Filtro acqua inox
12	3A00100202	Attacco Geka Filetto interno 1/2"
13	3G00528002	Nipplo zincato FIG.280 1/2



Pos.	Référence	Désignation
14a	3G00301300	Elettrovalvola NC 1/2
14b	3G00301401	Bobina 230VAC
15	3A00100102	Attacco Geka PG15 1/2"
16	3F00700201	Tubo PVC/gomma 13x19 (senza Geka)
17	3G50300200	Portagomma 1/2"X14"
18	3G00509002	Gomito 90° zincato FF FIG.90 1/2"