


## Intonacatrice continua MIXER PLUS TOP - Quadro elettrico

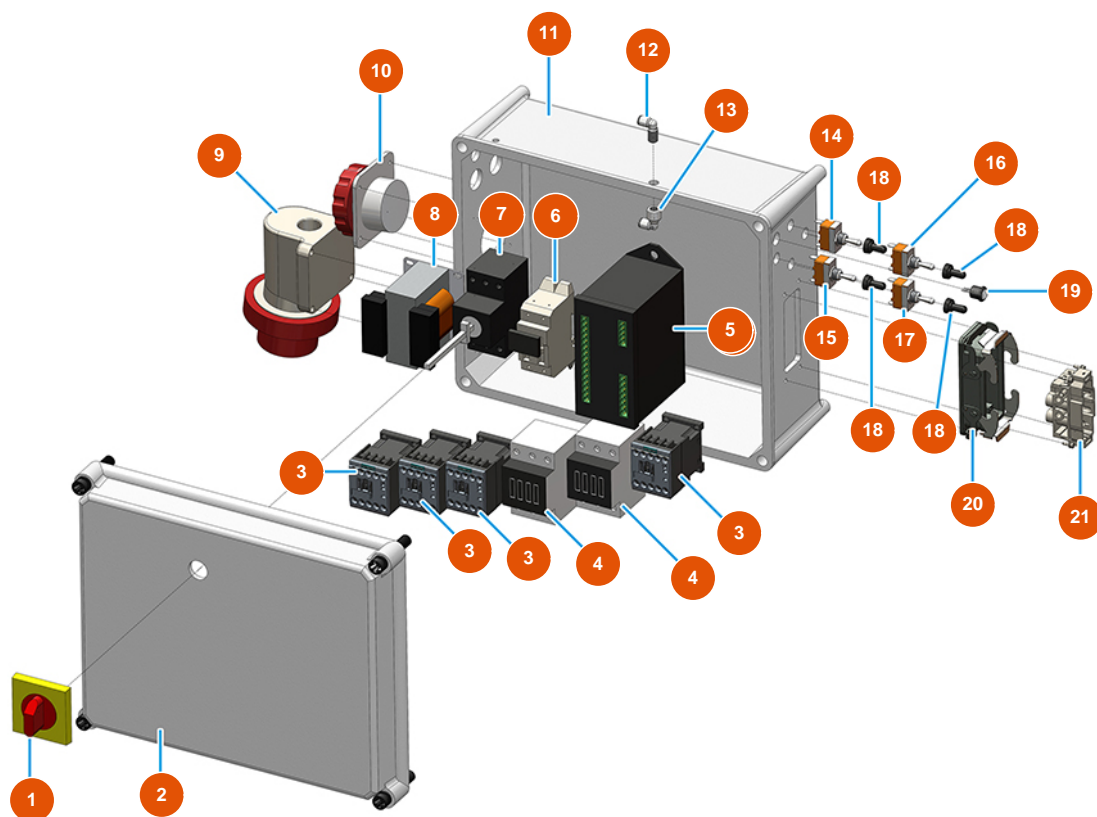

### Détails des pièces

Pos.	Référence	Désignation
1	3C01300207	Manovra x ABB rossa/gialla IP64 MS1
2	3C00110154	2
3	3C00700107	Contattore ABB A8-30-01 4KW
4	3C00700307	Contattore ABB A16-30-01 7,5KW
5	3C03201510	Programmatore Black box per PLUS TOP
6	3C05050500	Portafusibile unipolare 10,3X38
7	3C01030108	Magnetico ABB-MS325 20A
8	3C00500402	Trasformatore 70/80VA 400/42/24/15
9	3C03000305	Spina parete 3poli+neutro+terra 32A GW 60442
10	3C02600203	Presse inc. 3P+T 16A GW 62231
11	3C00110454	11
12	3G50200201	Attacco legris gomito 6X1/8 M
13	3G50200103	Attacco legris 6X1/8 F 3114



Pos.	Référence	Désignation
14	3C01800500	Commutatore 1-0 T115 A-A
15	3C01800800	Commutatore 1-0-1 T215 T-A
16	3C01800100	Commutatore 1-0-1 T115 E-A
17	3C01800200	Commutatore (1)-0-(1) FASTON T115 G-A
18	3C02100100	Protezione di gomma per interruttore
19	8055000100	Led / portaled D.10 MM
20	3C02800502	Custodia incasso 16 poli 2LV CHI 16
21	3C02700700	Frutto presa 10 poli 16A 400V CNF 10